


DOCUMENTATIE TEHNICA MOTOCOASE DE UMUR


ELAN -208

ELAN -209

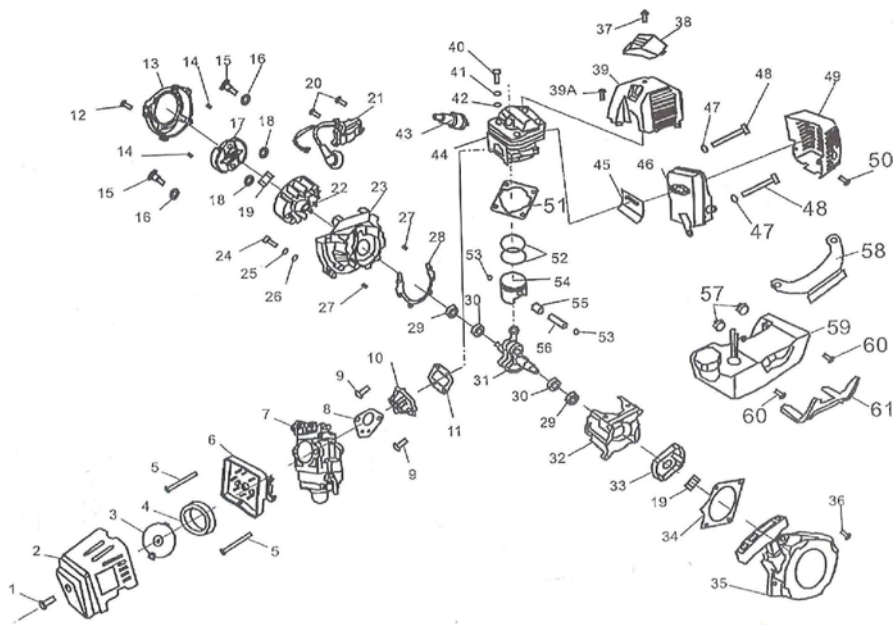

<i>PICNo.</i>	<i>SPECIFICATI</i>	<i>Cod Intern ELAN208</i>	<i>Cod intern ELAN209</i>
1	<i>BoltM5x16</i>	<i>pseln208-2-1</i>	
2	<i>AirFilterCover</i>	<i>pseln208-2-2</i>	
3	<i>FilterCover</i>	<i>pseln208-2-3</i>	
4	<i>Filter</i>	<i>pseln208-2-4</i>	
5	<i>BoltM5x55</i>	<i>pseln208-2-5</i>	
6	<i>AirFilterCombinationassy</i>	<i>pseln208-2-6</i>	
7	<i>Carburetor</i>	<i>pseln208-2-7</i>	
8	<i>CarburetorGasket</i>	<i>pseln208-2-8</i>	
9	<i>BoltM5x25</i>	<i>pseln208-2-9</i>	
10	<i>Boot-intake</i>	<i>pseln208-2-10</i>	
11	<i>Gasket-intake</i>	<i>pseln208-2-11</i>	
12	<i>BoltM5x25</i>	<i>pseln208-2-12</i>	
13	<i>FlywheelCover</i>	<i>pseln208-2-13</i>	
14	<i>PinΦ5x10</i>	<i>pseln208-2-14</i>	
15	<i>ClutchPositioningBolts</i>	<i>pseln208-2-15</i>	
16	<i>Gasket</i>	<i>pseln208-2-16</i>	
17	<i>ClutchAssy</i>	<i>pseln208-2-17</i>	
18	<i>ClutchGasket</i>	<i>pseln208-2-18</i>	
19	<i>ScrewM8</i>	<i>pseln208-2-19</i>	
20	<i>BoltsM5x25</i>	<i>pseln208-2-20</i>	
21	<i>Electronicignition</i>	<i>pseln208-2-21</i>	
22	<i>Flywheel</i>	<i>pseln208-2-22</i>	
23	<i>LeftCrank</i>	<i>pseln208-2-23</i>	
24	<i>BoltsM5x30</i>	<i>psexp89-2-24</i>	
25	<i>Elasticwasher5</i>	<i>pseln208-2-25</i>	
26	<i>washer5</i>	<i>pseln208-2-26</i>	
27	<i>PinΦ5x10</i>	<i>pseln208-2-27</i>	
28	<i>PaperGasket</i>	<i>pseln208-2-28</i>	
29	<i>SealOilΦ12x Φ22x7</i>	<i>pseln208-2-29</i>	
30	<i>Bearing-Ball</i>	<i>pseln208-2-30</i>	
31	<i>Crankshaftassy</i>	<i>pseln208-2-31</i>	
32	<i>RightCrank</i>	<i>pseln208-2-32</i>	
33	<i>Housing-StarterAssy</i>	<i>pseln208-2-33</i>	
34	<i>StarterGasket</i>	<i>pseln208-2-34</i>	
35	<i>Starterassy</i>	<i>pseln208-2-35</i>	
36	<i>BoltsM5x20</i>	<i>pseln208-2-36</i>	
37	<i>BoltsM5x18</i>	<i>pseln208-2-37</i>	
38	<i>Cover</i>	<i>pseln208-2-38</i>	
39	<i>Cylindercover</i>	<i>pseln208-2-38</i>	
39A	<i>BoltsScrewM5x12</i>	<i>pseln208-2-39a</i>	
40	<i>BoltsscrewM5x25</i>	<i>pseln208-2-40</i>	
41	<i>Elastciwasher5</i>	<i>pseln208-2-41</i>	
42	<i>washer5</i>	<i>pseln208-2-42</i>	
43	<i>SparkPlug</i>	<i>11-025</i>	
44	<i>Cylinder</i>	<i>pseln208-2-44</i>	<i>pseln209-2-44</i>
44a	<i>Set motor</i>	<i>pseln208-2-44a</i>	<i>pseln209-2-44a</i>
45	<i>Muffler gaschet</i>	<i>pseln208-2-45</i>	

46	Muffler	pseln208-2-46	
47	Elasticwasher5	pseln208-2-47	
48	InnerBoltsM6x55	pseln208-2-48	
49	c	pseln208-2-49	
50	Washer6	pseln208-2-50	
51	CylinderGasket	pseln208-2-51	
52	Pistonring	pseln208-2-52	pseln209-2-52
53	Pistonpin-Snap	pseln208-2-53	
54	Piston	pseln208-2-54	pseln209-2-54
55	Bearing-needle Conrod	pseln208-2-55	
56	Pistonpin	pseln208-2-56	pseln209-2-56
57	RubberGasket	pseln208-2-57	
58	Oiltankconnectplate	pseln208-2-58	
59	OilTank	pseln208-2-59	
60	BoltsM5x20	pseln208-2-60	
61	OilTankProtectivePlate	pseln208-2-61	

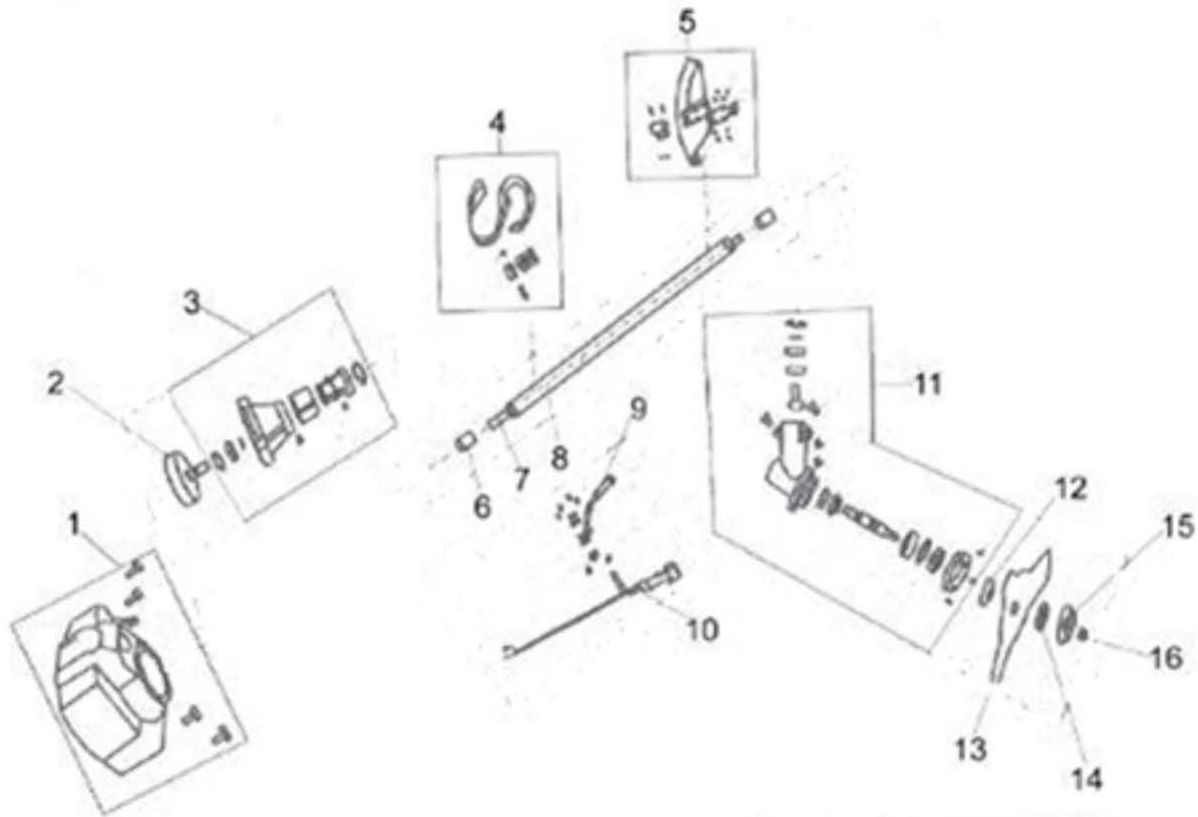

Nr.	Denumire	Cod intern
1	Motor	<i>pseln208-1-1</i>
2	Oala ambreiaj	<i>pseln208-1-2</i>
3	Cuplaj	<i>pseln208-1-3</i>
4	Ham	<i>pseln208-1-4</i>
5	Aparatoare	<i>pseln208-1-5</i>
6	Ghidaj	<i>pseln208-1-6</i>
7	Arbore	<i>pseln208-1-7</i>
8	Tija	<i>pseln208-1-8</i>
9	Corn	<i>pseln208-1-9</i>
10	Asamblu acceleratie	<i>pseln208-1-10</i>
11	Cap reductor	<i>pseln208-1-11</i>
12	Blocator	PS409s-1-47
13	Cutit	Ps309-1-40
14	Saiba	PS409s-1-41
15	Oala protectie	PS409s-1-42
16	Piulita	PS409s-1-43