

Documentatie tehnica ferastrau electric 316e



Nr. Crt	Denumire produs	Product name	Cod comanda 316e
1	cablu alimentare	cablu	ps316e-1
2	manson	cablu sheath	ps316e-2
3	placa fixare	pressing board	ps316e-3
4	surub	screw	ps316e-4
5	buton blocare	locking button	ps316e-5
6	arc	brake spring	ps316e-6
7	buton	switch	ps316e-7
8	comutator principal	master switch	ps316e-8
9	saiba	platen	ps316e-9
10	surub	screw	ps316e-10
11	condensator	capacitor	ps316e-11
12	surub	screw	ps316e-12
13	surub	screw	ps316e-13
14	capac motor	motor cover	ps316e-14
15	maneta motor stop	preventer plate	ps316e-15
16	eticheta	label	ps316e-16
17	carcasa stanga	left housing	ps316e-17
18	saiba	washer	ps316e-18
19	surub	screw	ps316e-19
20	arc	spring lamination	ps316e-20
21	surub	tapping screw	ps316e-21
22	intrerupator	microswitch	ps316e-22
23	buson rezervor	fuel tank cap	ps316e-23
24	rezervor ulei	fuel tank	ps316e-24
25	garnitura	gasket	ps316e-25
26	supapa dezaerare	oil output mouth	ps316e-26
27	conector	connection	ps316e-27
28	burete	sponge	ps316e-28
29	filtru ulei	oil filter	ps316e-29
30	inel etansare	seal ring	ps316e-30
31	carcasa dreapta	right housing	ps316e-31
32	eticheta	label	ps316e-32
33	surub	screw	ps316e-33
34	surub	screw	ps316e-34
35	ghera	wood insert teeth	ps316e-35
36	inel etansare	seal ring	ps316e-36
37	surub	screw	ps316e-37
38	surub	screw	ps316e-38
39	siguranta	check ring	ps316e-39
40	antrenor lant	hexagon sprocket	ps316e-40

41	arc	tension spring	ps316e-41
42	surub	screw	ps316e-42
43	capac	cover	ps316e-43
44	rulment	bearing	ps316e-44
45	ax	output shaft	ps316e-45
46	arc	torsional spring	ps316e-46
47	bucsa	shaft bush	ps316e-47
48	roata antrenare ebonita	drive wheel	ps316e-48
48a	ansamblu roata antrenare ebonita	drive wheel assy	ps316e-1-48a
48b	roata antrenare metalica	drive wheel	ps316e-48b
48c	ansamblu roata antrenare metalica	drive wheel assy	ps316e-1-48c
49	rulment 608z	bearing 608z	ps316e-49
50	piulita	nut M8	ps316e-50
51	inel etansare	seal ring	ps316e-51
52	inel etansare	seal ring	ps316e-52
53	distribuitor ulei	oil-output mouth	ps316e-53
54	piulita	nut M8	ps316e-54
55	pinion	gear	ps316e-55
56	bucsa	bush	ps316e-56
57	surub	screw	ps316e-57
58	surub	screw	ps316e-58
59	carcasa roata antrenare	support plate	ps316e-59
60	pompa ulei	oil pump	ps316e-60
61	surub	screw	ps316e-61
62	furtun	oil-intake pipe	ps316e-62
63	furtun	oil-output pipe	ps316e-63
64	tija	push rod	ps316e-64
65	arc	push rod spring	ps316e-65
66	surub	screw	ps316e-66
67	placa fixare	fixed plate	ps316e-67
68	tija	connecting rod	ps316e-68
69	tija frana	brake rod	ps316e-69
70	arc frana	brake spring	ps316e-70
71	saiba	washer	ps316e-71
72	rulment	bearing	ps316e-72
73	rotor	rotor	ps316e-73
74	rulment	bearing	ps316e-74
75	surub	screw	ps316e-75
76	saiba grover	spring washer	ps316e-76
77	saiba	washer	ps316e-77
78	deflector	wind shield	ps316e-78

Producător motoutilaje

Documentatie tehnică

79	stator	stator	ps316e-79
80	saiba	washer steel	ps316e-80
81	saiba	washer	ps316e-81
82	piulita	nut	ps316e-82
83	suport stator	stator holder	ps316e-83
84	bucsa cupru	copper bush	ps316e-84
85	perii	carbon brush	ps316e-85
86	conector 1	connect line-1	ps316e-86
87	conector 2	connect line-2	ps316e-87
88	conector 3	connect line-3	ps316e-88
89	conector 4	connect line-4	ps316e-89
90	conector 5	connect line-5	ps316e-90
91	sina	bar	cs316e-91
92	lant	chain	cs3/8-1.3-35cm
93	bucsa	bush	ps316e-93
94	placa	plate	ps316e-94
95	saiba	washer	ps316e-95
96	roata reglare lant	adjusting wheel	ps316e-96
97	capac lant	end cap	ps316e-97
98	surub	screw	ps316e-98
99	zegher	snap ring	ps316e-99
100	siguranta	clip	ps316e-100
101	buton reglare lant	adjusting knob	ps316e-101
102	piulita fixare lama	blade fastening nut	ps316e-102